



































Přehled dílců pro stavebnice „ARCHA“

č.	název dílce	nákres	ARCHA			Picture No.			
			1	2	3	(5)	(10)	(18)	(21)
1	TV 250				1				
2	T 230			5	6				
3	T 230 A				1				
4	T 230 B			2	2		2		
5	TS 230				2				
6	TS 230 A				2				
7	T 230 D			2	2				
8	T 230 Z				1				
9	TV 180				1				
10	T 160		9	10	10	5	8	4	
11	T 160 B		2	2	2				
12	TS 160		2	2	2		2		
13	TS 160A		2	2	2	2			
14	T 160 D		2	2	2	2		2	
15	T 160 Z		2	2	2		2		
16	T 105		1	1	1		1		
17	T 90		7	7	8	4		4	8
18	TS 90				2			2	2
19	TZK 90				1				
20	T9OZ		2	2	2	2		2	2
21	S 50		2	2	2	2	2		
22	T 50		4	4	4		4		
23	T 50 B		2	2	2	2		2	
24	T 35		15	18	18	11	9	11	4
25	V 255			8	8	8	8		
26	V 195		8	8	8			4	
27	V 95				4				4
28	DVERE		1	1	1	1	1	1	
29	OKNO		3	4	4	2	3	2	
30	KOMIN		1	1	1	1	1		
31	STIT VELKY		2	2	2	2	2		
32	STIT MALY				2			2	2
33	TASKA V.				13				
34	TASKA M		80	104	104	80	104	40	20

